



# SMART DRAFT™

POWERED BY  BarTrack



## Glycol WiFi Connectivity Flow

# GLYCOL WIFI CONNECTIVITY FLOW

1.

Ensure the BarTrack BCM is plugged in



2.

Plug in the USB antenna into the USB Slot on the BCM



3.

Wait until you see a steady slow blinking green light illuminated before beginning the set up process




4.

Scan QR Code



5.

Open Terms & Conditions

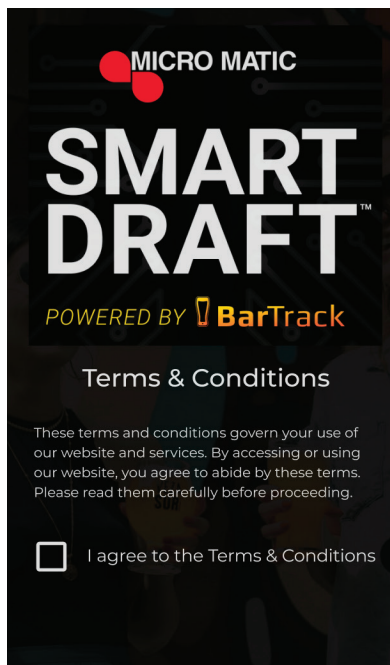

6.


Accept Terms & Conditions



# GLYCOL WIFI CONNECTIVITY FLOW


7.

## Choose User Type (Technician or Customer)

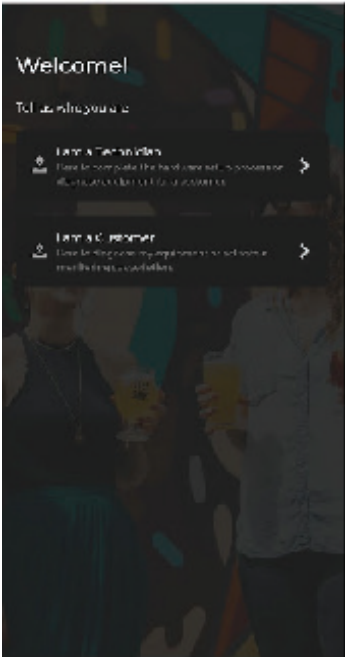


8.

## Sign up / Sign in

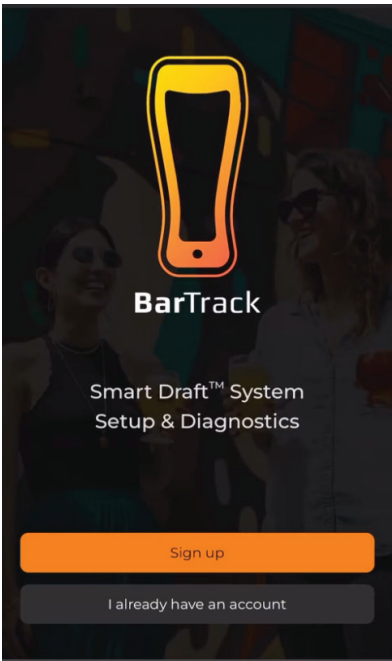


9.

## Log in With Email & Password

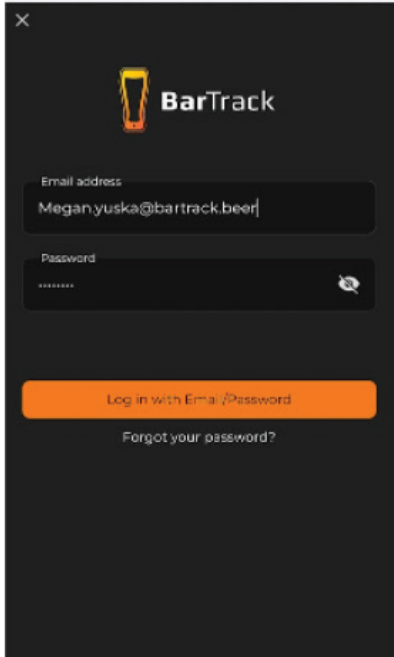


10.

## Set up Hardware

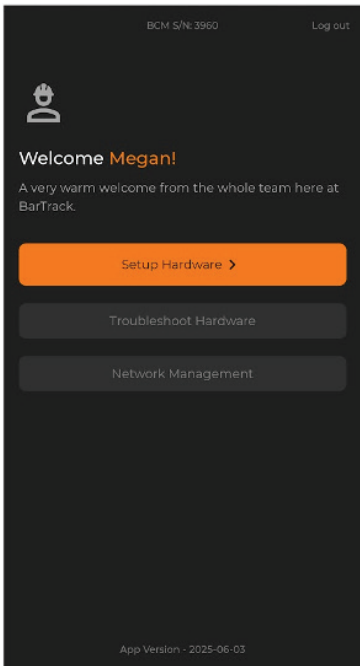


11.

## Hardware Setup Customer Selection

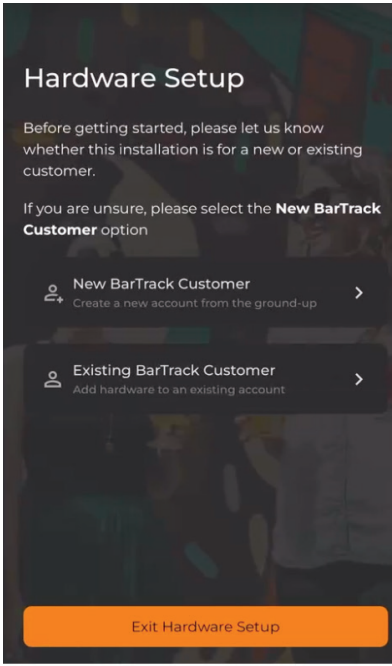

12.

## Enter Establishment Name

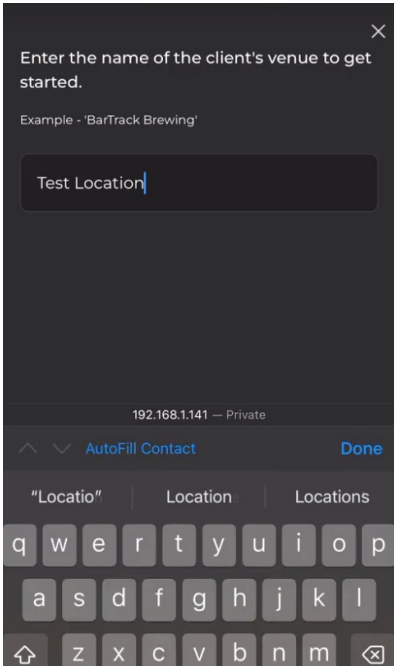

# GLYCOL WIFI CONNECTIVITY FLOW

13.

## Enter & Confirm Establishment Address

Confirm address:

Street address

8760 Stoneridge Dr

City

Manassas

State/territory

VA

Zip code

20111

<

Looks Good

14.

## Provide Establishment POC Information

Please provide the main Point of Contact for the venue where you are installing the Smart Draft equipment.

☐ I am the Point of Contact

Customer First Name

Joe

Customer Last Name

Smith

Customer Email

jsmith62@gmail.com

Customer Phone

202235555

<

Next

15.

## Confirm Customer Information

Please provide the main Point of Contact for the venue where you are installing the Smart Draft equipment.

☐ I am the Point of Contact

\* Customer First Name

Important

Please ensure all information provided thus far is correct.

You will not be able to return to this section once you proceed.

Cancel

Proceed

Phone Number


+1 (703) 498-7693

<

Next

16.

## Verify Equipment

 BarTrack

1

Verify Equipment

Not Started

>

2

Activate System

Not Started

>

3

System Acceptance

Not Started


>


Finished

17.


## Select Equipment Type – Select Glycol Chiller


To get started, please select the type of equipment associated with the QR code you scanned.


 Gateway

 Glycol Chiller

✓

 Back-Bar Refrigerator

 Direct-Draw Refrigerator

 Soda Dispenser

Confirm

18.

## Confirm Glycol Manufacturer – This will autopopulate

Select the manufacturer of your Glycol Chiller

Manufacturer

Micro Matic

Other...

Micro Matic

<<

>>

Next

# GLYCOL WIFI CONNECTIVITY FLOW

19.

## Confirm Equipment Type & Model Number – This will autopopulate

<

Model of your Micro Matic Glycol Chiller

The Model Number can include alphanumeric characters and is not case-sensitive. This can typically be found on the manufacturer's label on the equipment.

Equipment Type

1-Pump System

Model # (optional)

MMPP4301

Example - 'MMPP4301'

Next

20.

## Confirm Serial Number – This will autopopulate

<

Serial Number of your Micro Matic Glycol Chiller

The Serial Number can include alphanumeric characters and is not case-sensitive. This can typically be found on the manufacturer's label on the equipment.

Serial Number

A12345

Example - 'C123456'

Next

21.

## Enter Description of Installation Location

<

Equipment Installation Location

Add a brief description of where the equipment is installed to help with future troubleshooting and service.

Location

Above back cooler

Example - 'Above Main Cooler'

Next

22.

## Confirm Equipment

×

Add any additional equipment you would like to set up. When you are finished, proceed to the next step.

+ Add Equipment

Glycol Chiller #1

S/N - 3621

Confirm

23.

## Activate System

BarTrack

1 Verify Equipment Completed

2 Activate System Not Started >

3 System Acceptance Not Started >

Finished

24.

## Identify Cooler Associated with Power Pack

Cooler Configuration

×

To begin the setup process, start by adding each Cooler and giving it a clear name. Don't worry - these names can always be updated later by the client if needed.

1 Cooler Name

Cooler #1


2 + Add Cooler

< Next

# GLYCOL WIFI CONNECTIVITY FLOW


25.

## Network Connection: Select Equipment to Connect

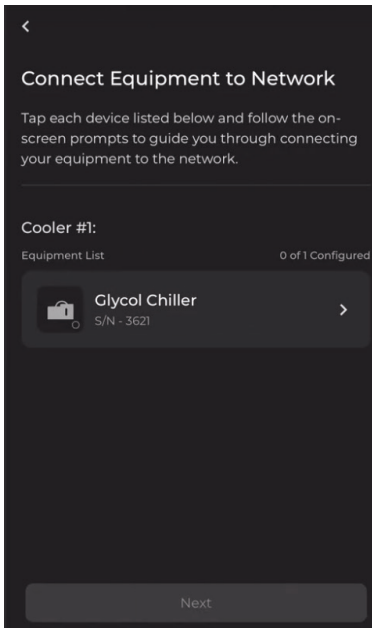

26.

## Select Connectivity Type - Wi-Fi

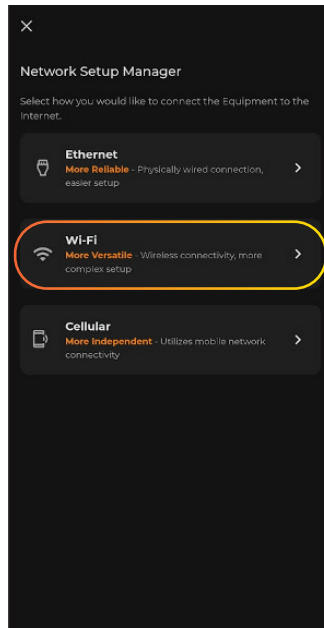


27.

## Ensure you Have log in Credentials Before Proceeding Forward



28.

## Select Wi-Fi Connection Type (Choose Dynamic if Unsure)

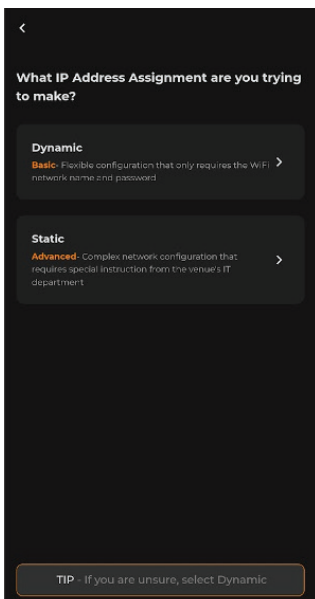


29.

## Device Connection: On your Device – go to Settings > Network & Internet



30.

## Select BarTrack-Setup-XXXX (These 4 Numbers Will Match the Serial Number on the BCM)

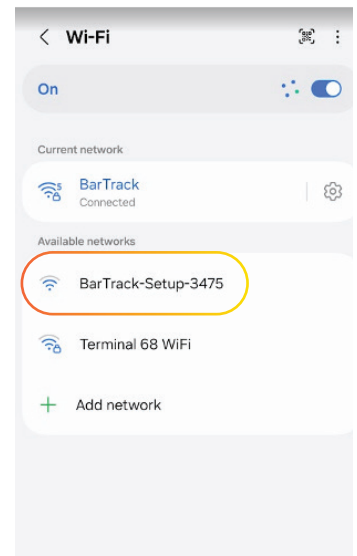




# GLYCOL WIFI CONNECTIVITY FLOW


31.

**Ensure your Device is Successful in Connecting to the Correct BarTrack-Setup Wi-Fi. When Connected, click “I’ve Connected to the Device”**

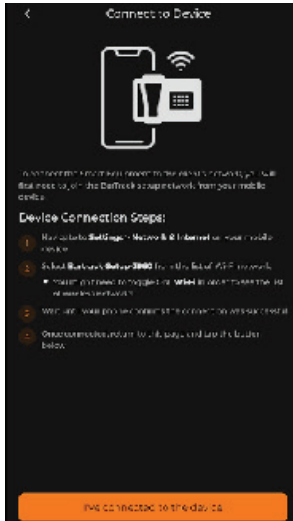


32.

**Network Configuration:**  
Click Orange “Open Network Setup” – This Will Open a New Tab

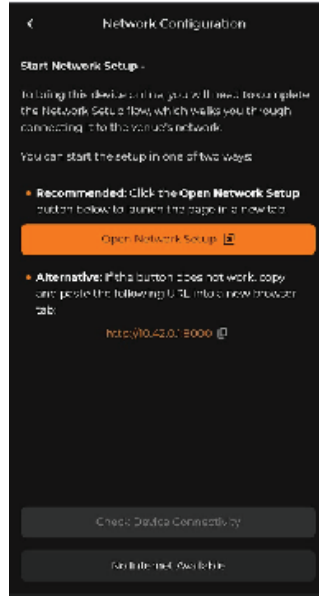


33.

**Select the Client’s Wi-Fi Network**

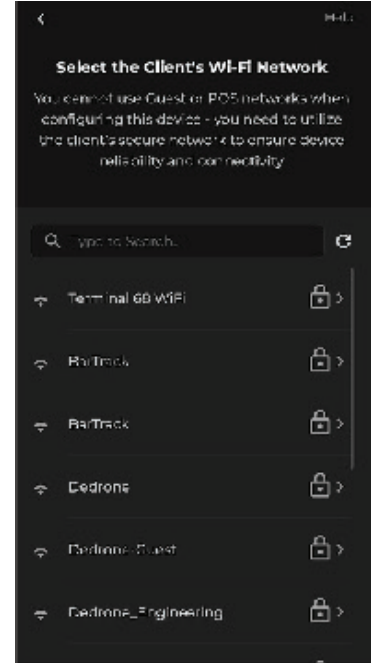


34.

**Enter Client Password to Wi-Fi Network & press Orange “Connect”**

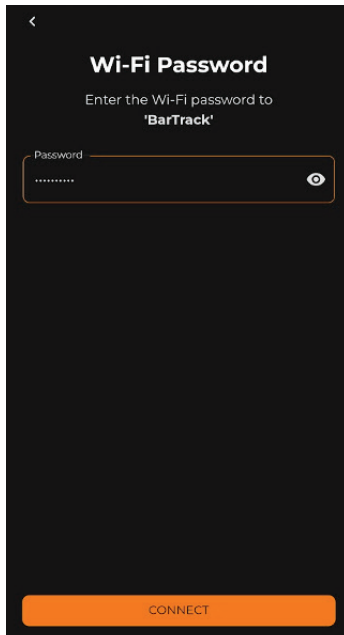

35.

**Wait While Device Connects to the Network**

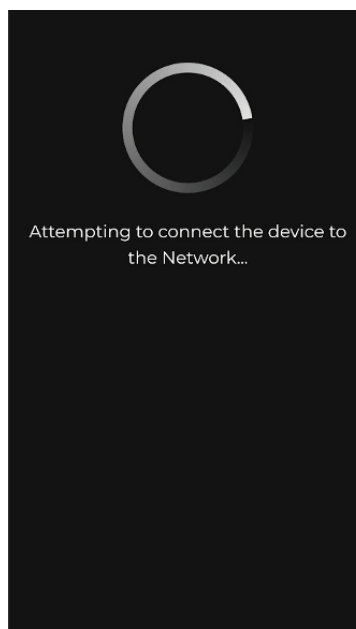

36.


**Ensure Successful Connection. Close This tab & Return to First Setup tab.**



# GLYCOL WIFI CONNECTIVITY FLOW


37.

## Click Check Device Connectivity

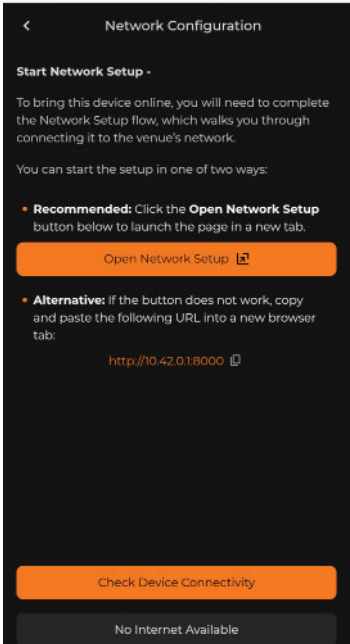


38.

## Wait While Device Connects to the Network

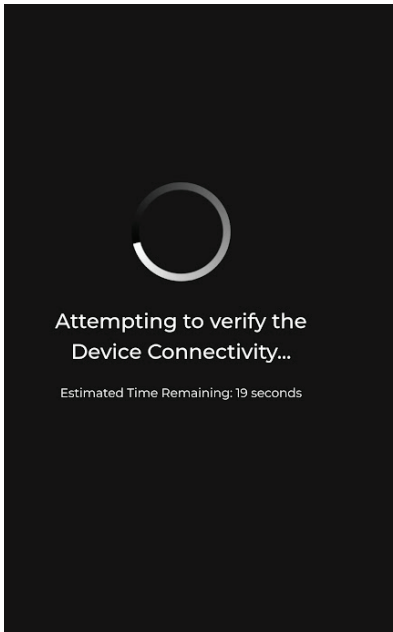


39.

## Ensure Device Connectivity

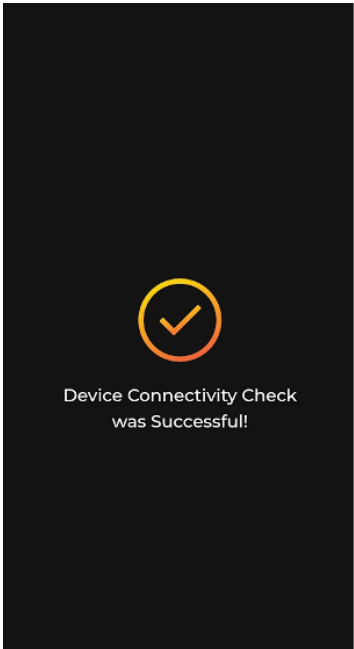


40.

## Confirm all Devices Listed are Configured – Select Next

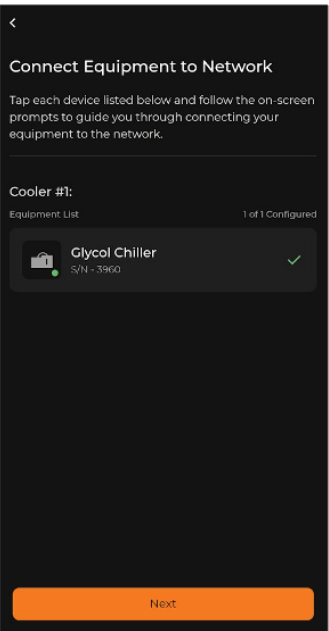


41.

## Confirm Device is Assigned to Correct Cooler – Select Next

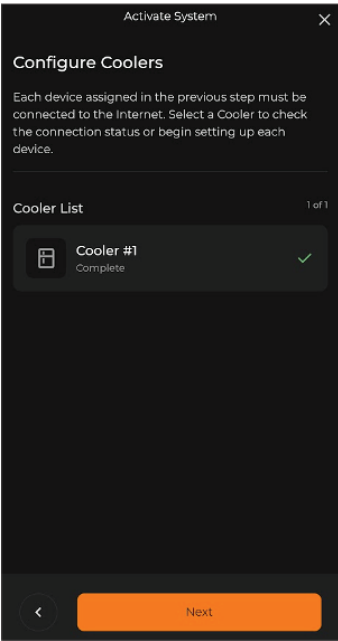

42.

## Begin System Acceptance

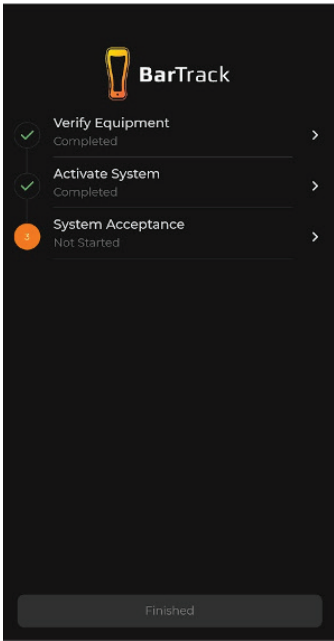



43.

Review Installation  
Summary & Press  
Submit

×

Install Summary

Location Details

VENUE NAME

Test Bar

ADDRESS

42555 Braddock Rd  
Chantilly, VA 20152

Registration Recipient

POINT OF CONTACT

Joe Smith  
jsmith123@gmail.com  
2021235555

Hardware


INSTALLED

Glycol Chillers1


Submit

44.

Installation Completed!



Installation Submitted



Install complete

Thank you so much for your help in getting the hardware configured at **Sample Restaurant** — we couldn't have done it without you!

You can click **Back to Home** to return to the home screen or simply close your browser.

Back to home