



BarTrack®



Glycol WiFi Connectivity Flow

For Retrofits

GLYCOL WIFI CONNECTIVITY FLOW

1.

Ensure the BarTrack BCM is plugged in



2.

Plug in the USB antenna into the USB Slot on the BCM




3.

Wait until you see a steady slow blinking green light illuminated before beginning the set up process




4.

Scan QR Code

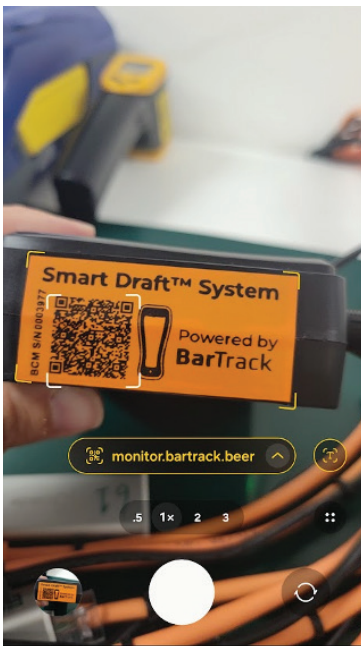

5.

Open Terms & Conditions

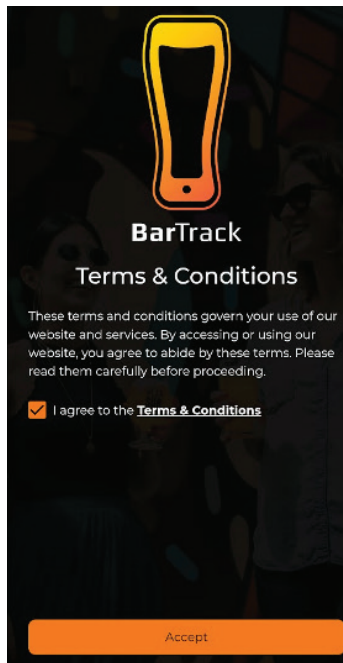

6.


Accept Terms & Conditions



GLYCOL WIFI CONNECTIVITY FLOW


7.

Choose User Type (Technician or Customer)

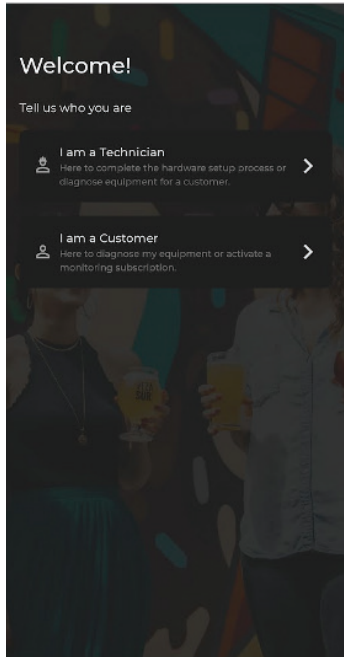


8.

Sign up / Sign in

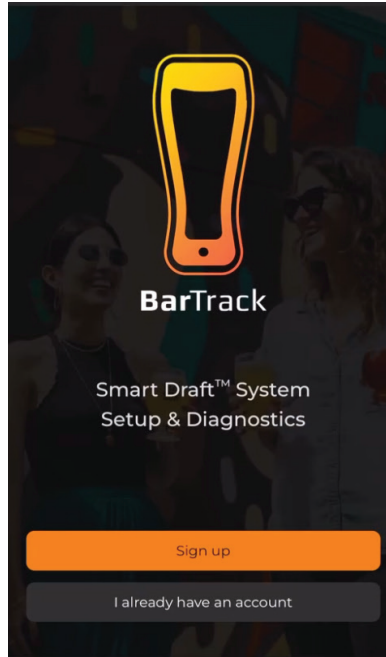


9.

Log in With Email & Password

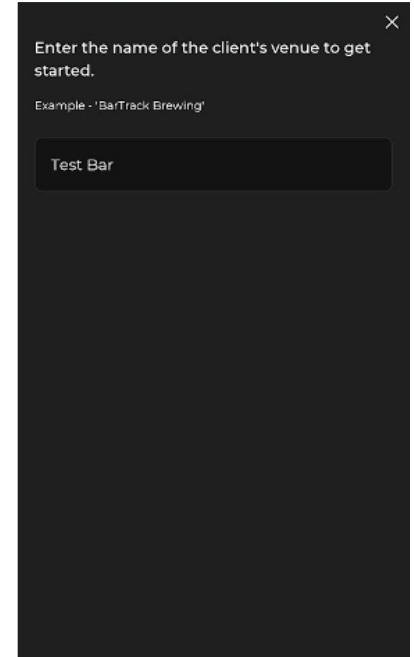


10.

Set up Hardware

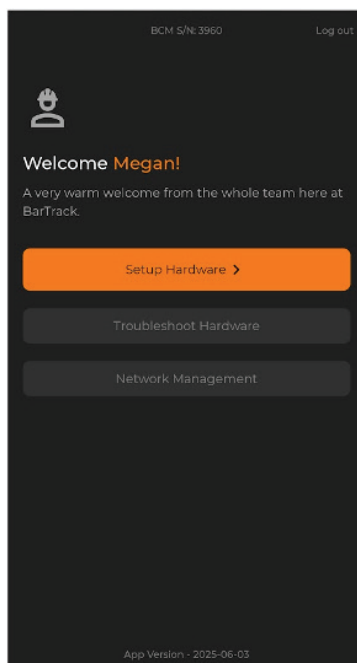


11.

Hardware Setup Customer Selection

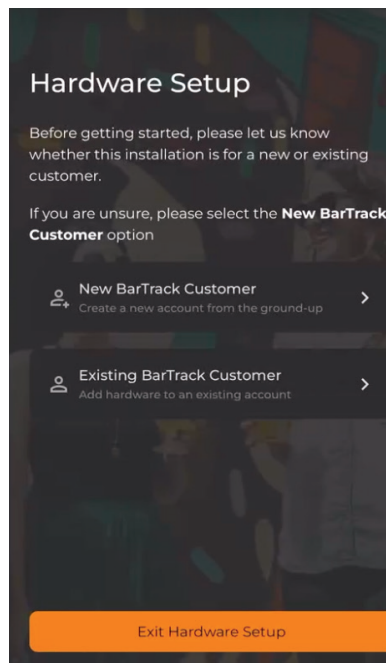

12.


Enter Establishment Name

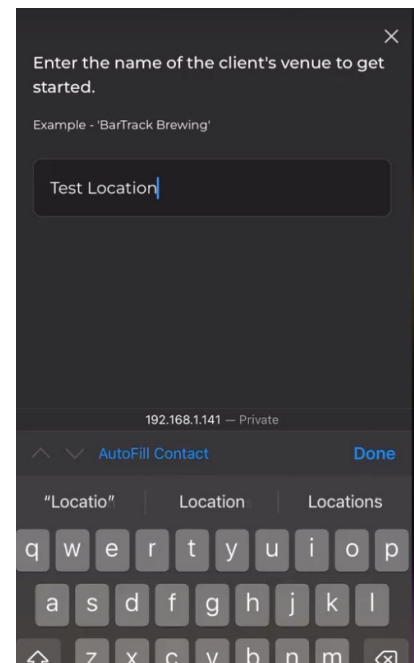

GLYCOL WIFI CONNECTIVITY FLOW

13.

Enter & Confirm Establishment Address



1 Verify Equipment Not Started >

2 Activate System Not Started >

3 System Acceptance Not Started >

Finished

14.

Provide Establishment POC Information

Please provide the main Point of Contact for the venue where you are installing the Smart Draft equipment

☐ I am the Point of Contact

Customer First Name
Joe

Customer Last Name
Smith

Customer Email
Jsmith123@gmail.com

Customer Phone
2021235555

< Next

15.

Confirm Customer Information

Please provide the main Point of Contact for the venue where you are installing the Smart Draft equipment

☐ I am the Point of Contact

* Customer First Name

Important

Please ensure all information provided thus far is correct.

You will not be able to return to this section once you proceed.


Cancel Proceed

Phone Number
+1 (703) 498-7693

< Next

16.

Verify Equipment



1 Verify Equipment Not Started >

2 Activate System Not Started >

3 System Acceptance Not Started >

Finished

17.

Select Equipment Type – Select Glycol Chiller

To get started, please select the type of equipment associated with the QR code you scanned.

Gateway

Glycol Chiller ✓

Back-Bar Refrigerator

Direct-Draw Refrigerator

Soda Dispenser

Confirm

18.

Select Glycol Manufacturer

Select the manufacturer of your Glycol Chiller

Manufacturer
Type to filter

Other...

Kolpak

Kreyer

Krowne

Master-Bilt

Micro Matic

Nor-Lake

Other

Perlick

GLYCOL WIFI CONNECTIVITY FLOW

19.

Enter Equipment Type & Model Number

< Model of your Micro Matic Glycol Chiller

The Model Number can include alphanumeric characters and is not case-sensitive. This can typically be found on the manufacturer's label on the equipment.

Equipment Type
1-Pump System

Model # (optional)
MMPP4301

Example - "MMPP4301"

Next

20.

Enter Serial Number

< Serial Number of your Glycol Chiller

The Serial Number can include alphanumeric characters and is not case-sensitive. This can typically be found on the manufacturer's label on the equipment.

Serial Number
C123455

Example - "C123456"

21.

Enter Description of Installation Location

< Equipment Installation Location

Add a brief description of where the equipment is installed to help with future troubleshooting and service.

Location
Above back cooler

Example - "Above Main Cooler"

Next

22.

Confirm Equipment

✕

Add any additional equipment you would like to set up. When you are finished, proceed to the next step.

+ Add Equipment

Glycol Chiller #1
S/N - 3621

Confirm

23.

Activate System

BarTrack

1 Verify Equipment
Completed

2 Activate System
Not Started >

3 System Acceptance
Not Started >

Finished

24.

Identify Cooler Associated with Power Pack

<

What IP Address Assignment are you trying to make?

Dynamic
Basic - Flexible configuration that only requires the WiFi network name and password >


Static
Advanced - Complex network configuration that requires special instruction from the venue's IT department >

TIP - If you are unsure, select Dynamic

GLYCOL WIFI CONNECTIVITY FLOW


25.

Network Connection: Select Equipment to Connect

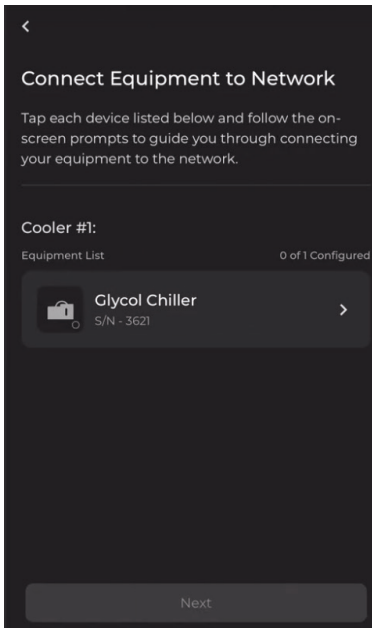

26.

Select Connectivity Type - Wi-Fi

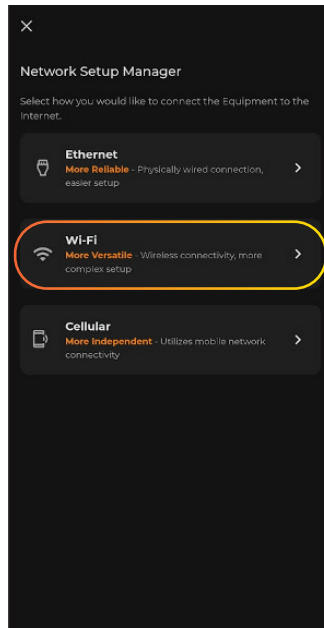


27.

Ensure you Have log in Credentials Before Proceeding Forward



28.

Select Wi-Fi Connection Type (Choose Dynamic if Unsure)

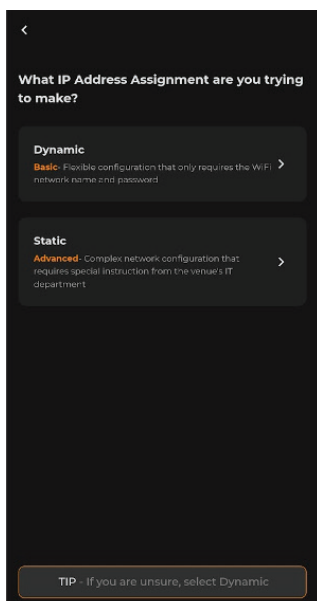


29.

Device Connection: On your Device – go to Settings > Network & Internet



30.


Select BarTrack-Setup-XXXX (These 4 Numbers Will Match the Serial Number on the BCM)

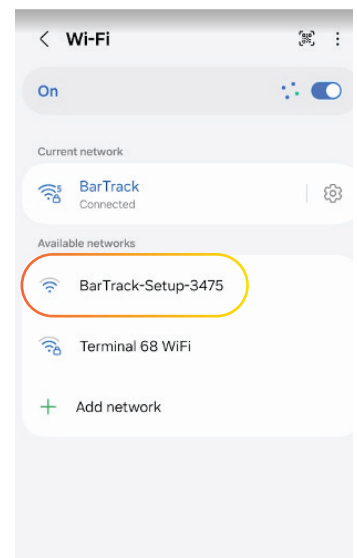

GLYCOL WIFI CONNECTIVITY FLOW


31.

Ensure your Device is Successful in Connecting to the Correct BarTrack-Setup Wi-Fi. When Connected, click “I’ve Connected to the Device”

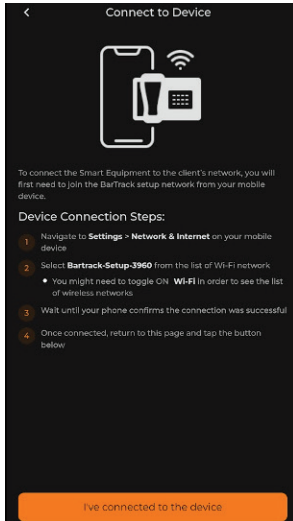


32.

Network Configuration:
Click Orange “Open Network Setup” – This Will Open a New Tab

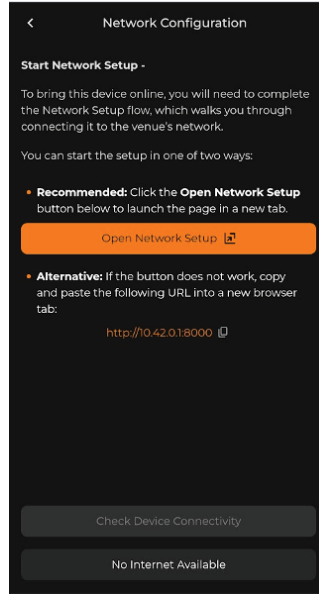


33.

Select the Client's Wi-Fi Network

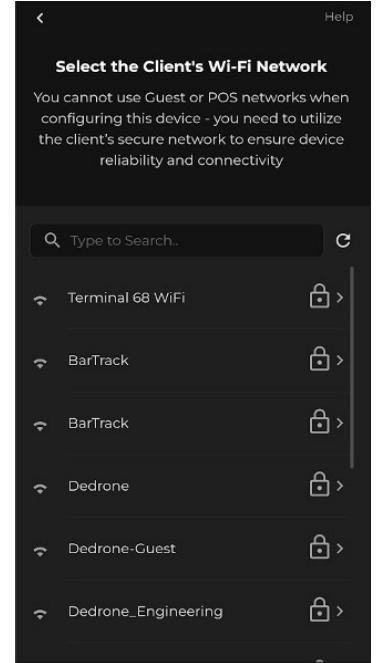


34.

Enter Client Password to Wi-Fi Network & press Orange “Connect”

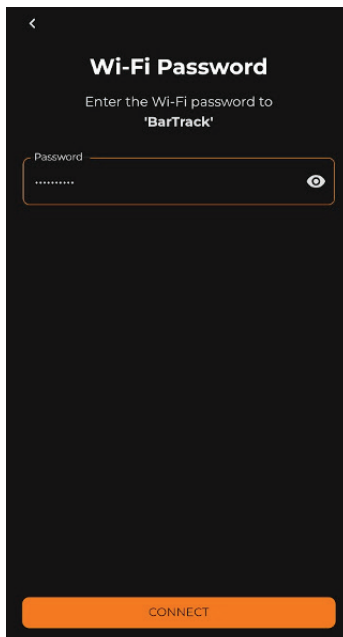


35.

Wait While Device Connects to the Network

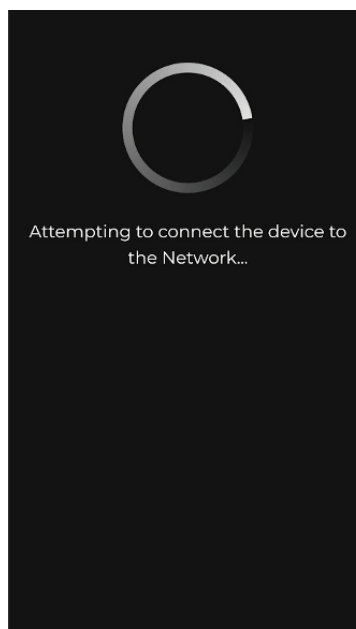

36.


Ensure Successful Connection. Close This tab & Return to First Setup tab.

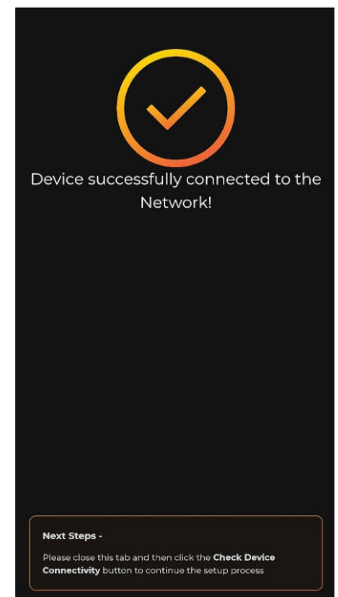

GLYCOL WIFI CONNECTIVITY FLOW


37.

Click Check Device Connectivity

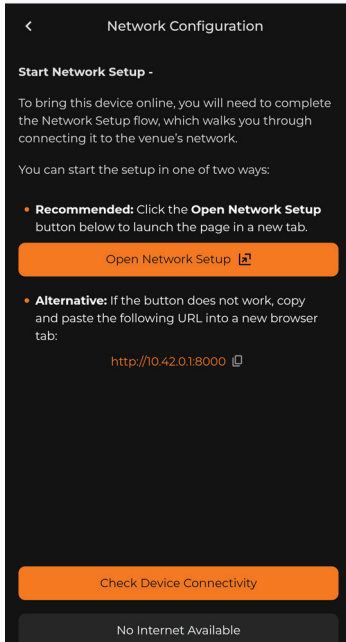


38.

Wait While Device Connects to the Network

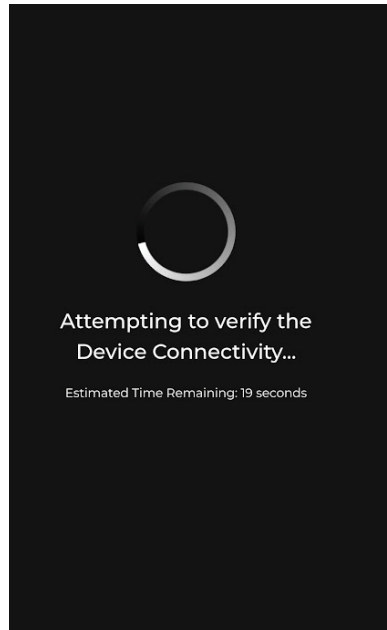


39.

Ensure Device Connectivity

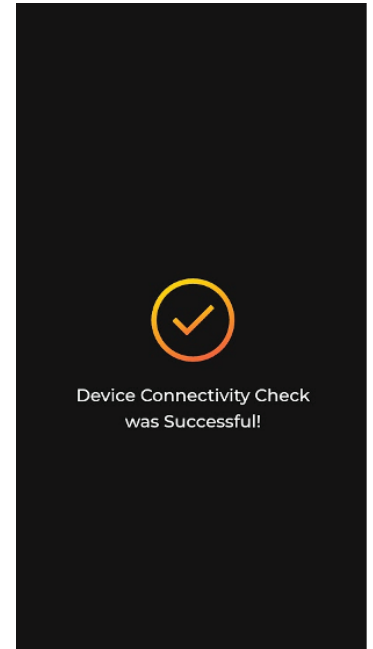


40.

Confirm all Devices Listed are Configured – Select Next

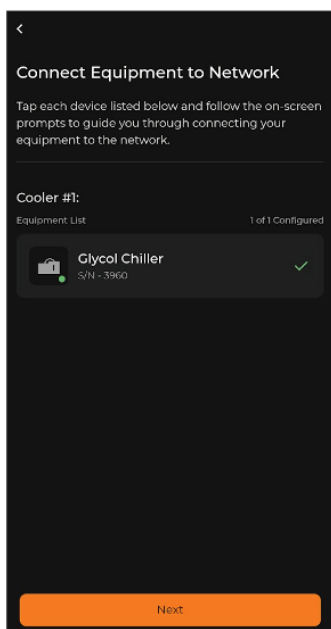


41.

Confirm Device is Assigned to Correct Cooler – Select Next

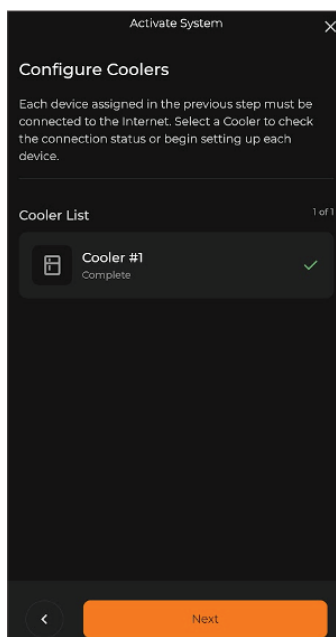

42.

Begin System Acceptance

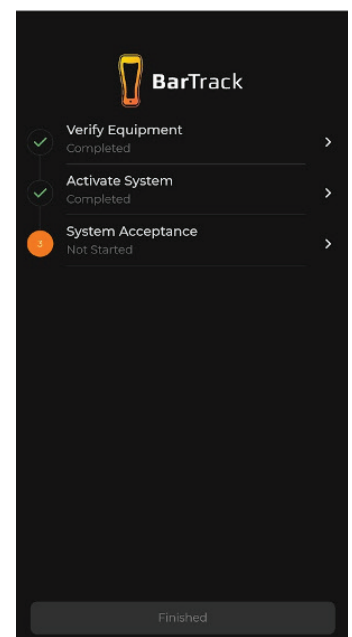

GLYCOL WIFI CONNECTIVITY FLOW

43.

Review Installation Summary & Press Submit

Install Summary

Location Details

VENUE NAME

Test Bar

ADDRESS

42555 Braddock Rd
Chantilly, VA 20152

Registration Recipient

POINT OF CONTACT

Joe Smith
jsmith123@gmail.com
2021235555

Hardware

INSTALLED

Glycol Chillers1

Submit

44.

Installation Completed!

Connect Equipment to Network

Tap each device listed below and follow the on-screen prompts to guide you through connecting your equipment to the network.

Cooler #1:

Equipment List1 of 1 Configured

Activate System

Configure Coolers

Each device assigned in the previous step must be connected to the Internet. Select a Cooler to check the connection status or begin setting up each device.

Cooler List1 of 1

Cooler #1

Complete

<

Next